ICON

Instructions for antenna installation

1. Unscrew the 4 Allen screws using the Torx T20 screwdriver as shown in the image.
   Note: For the F6, the 4 outermost screws of the yoke bracket must be unscrewed.



2. Open the fixture carefully. Place the side plate on the ground, keeping all cable connected.



3. Unscrew the 4 screws of the antenna cover using the Torx T10 screwdriver as shown in the image.



4. Ensure the seal is intact, then carefully pull the antenna cable through to the front panel.

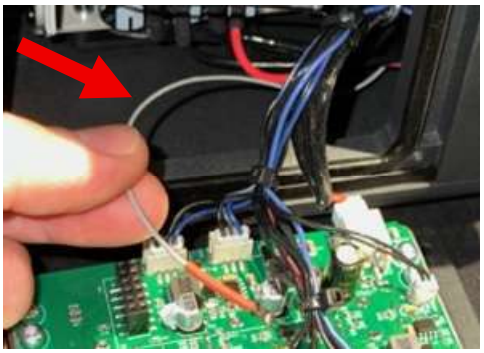

5. Tighten all 4 screws of the antenna.



6. Insert the module as shown in the picture.



7. Attach the antenna cable as shown in the image and secure the module with the screw provided.

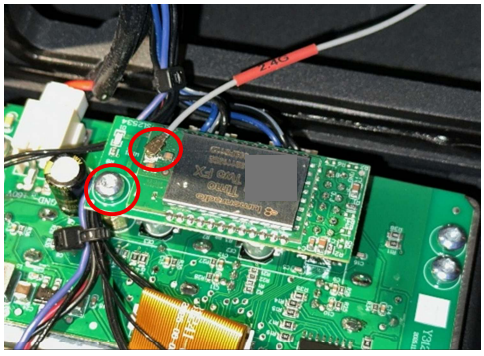

8. Reattach the cover and tighten the screws securely.

